


Modellbau **W**erkstatt **-T**rape
www.modellbauwerkstatt-rape.de
mail@modellbauwerkstatt.de
100% handmade in Germany

Inh.:
 Michael Tape
 Ullhaus 70
 52379 Langenwehe
 Deutschland


MFH building step 11
 replaces MFH parts
 M141, M191, M240
 E7



if using decal „b“, glue
 etch part „3“ opposite on „4“.
 (“Setrab“ facing to „4“)

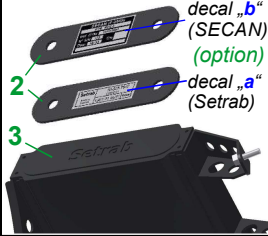


Bend part „1“ according shape of „4 & 8“.
 Do a dryfitting to gearbox mounting points
 prior painting the unit.
 Drill holes to fit **S1** in gearbox.
 (remove molded bolts)

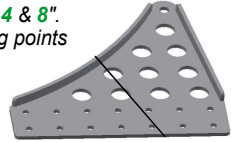

(glue or solder parts together)

solder

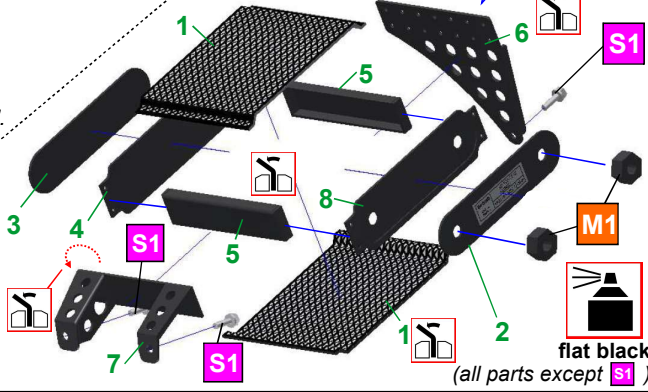

flat black
(all parts except **S1**)

MWT Modellbau **W**erkstatt **-T**rape



Porsche 956
-Oil cooler-



(replacement / upgrade parts for MFH kits) Scale 1/12